




Designer Series Accent Frame Installation Guide

Horizontal Mount


Step 1

Level and mount bracket to wall.
(Mount into a stud for best results.)

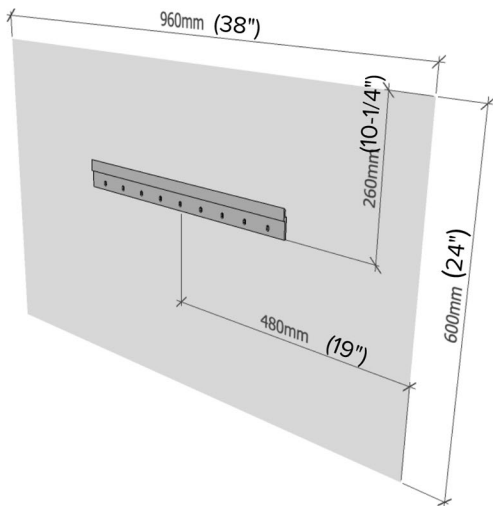


Step 2

Attach tray board to the mounted bracket.

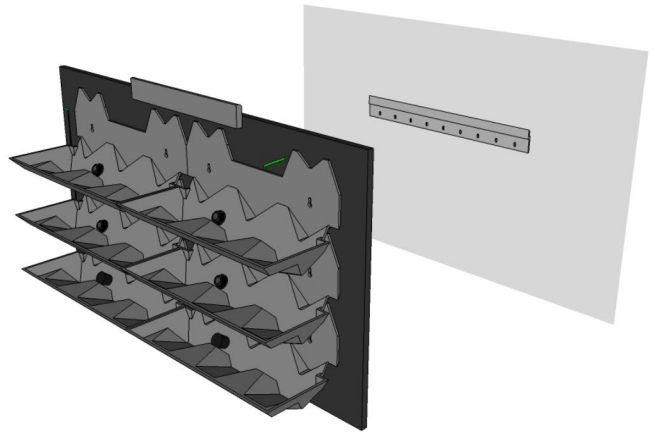


Step 3

Attach outer frame to tray board.

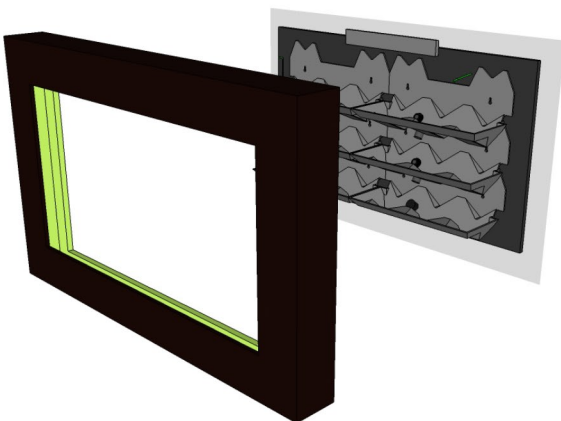

Step 4

Insert eighteen 4" potted plants into the pot holders.

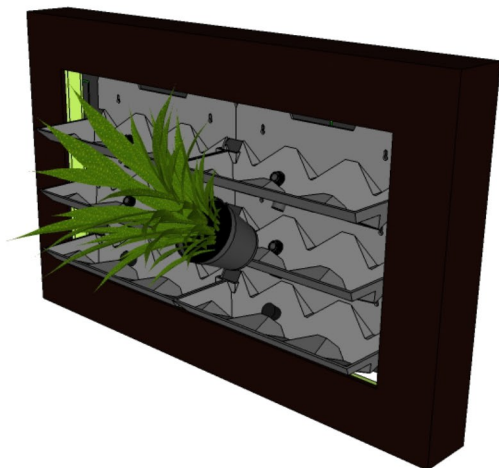





Designer Series Accent Frame Installation Guide

Vertical Mount Prep

Tray layout Prep 1

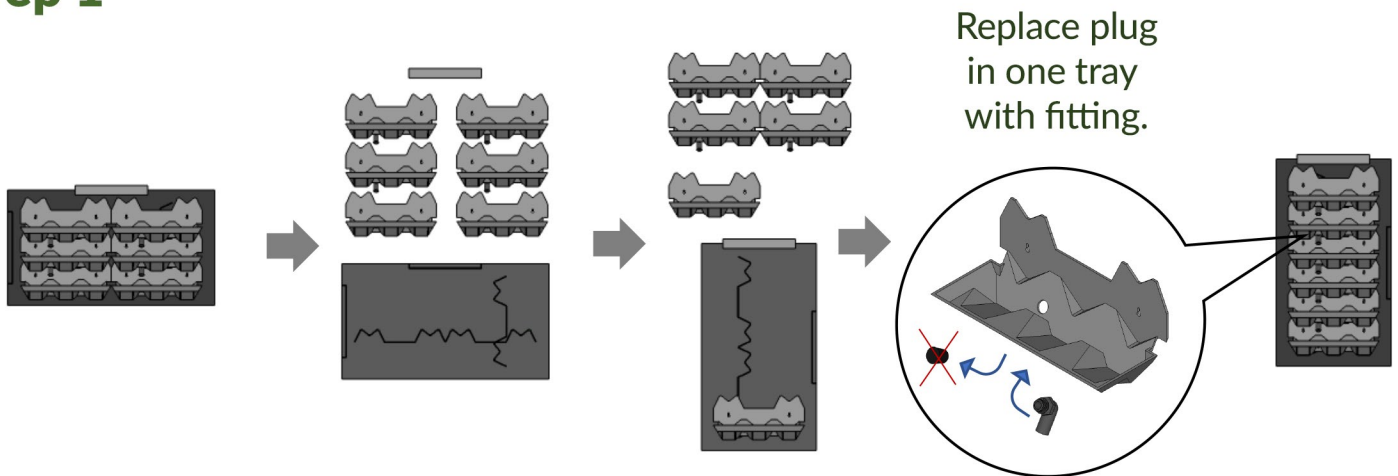

Mounting clip layout Prep 2

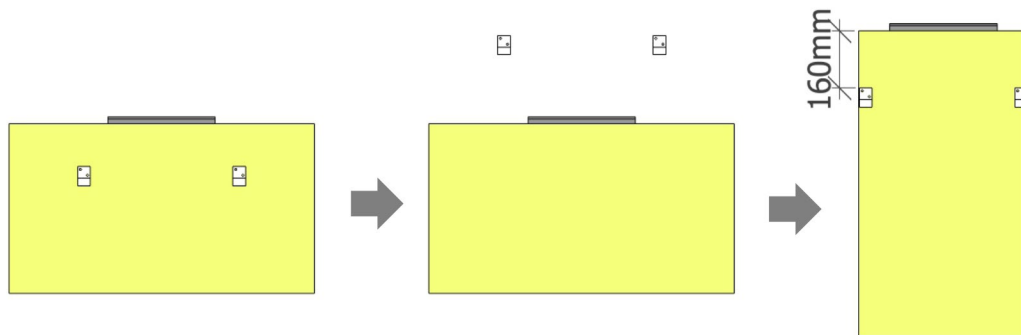




Designer Series Accent Frame Installation Guide

Vertical Mount


Step 1

Level and mount bracket to wall.
(Mount into a stud for best results.)

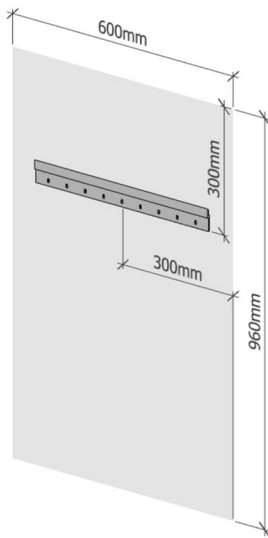


Step 2

Attach tray board to the mounted bracket.

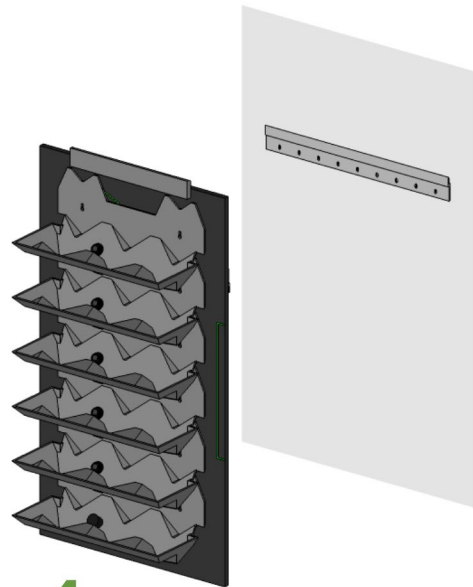

Step 3

Attach outer frame to tray board.

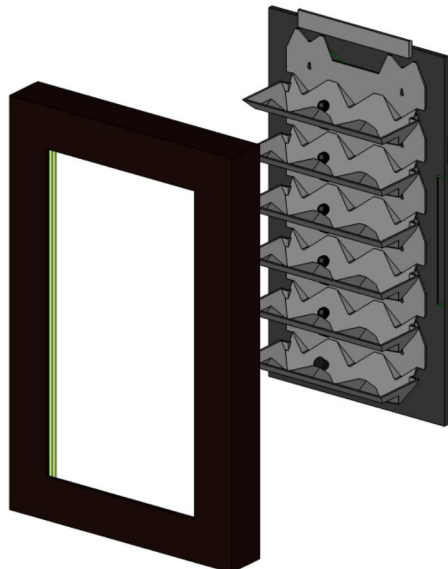

Step 4

Insert eighteen 4" potted plants into the pot holders.

